 
 




Fortyeight Label Series



Label 6 Series



Label 4 Series



Label 2 Series

WARNING

To ensure a maximum efficient use of the product, read the instructions before proceeding to installation.



This fixture must be installed by a licensed and qualified electrician. The installer must comply with NEC and local building codes when installing the fixture



Electrical current can cause painful shock, serious injury, or even death. Make sure you turn off the power supply, ground fixture(s), and make sure all electrical connections are correct and secured tightly



Keep the label of the original packaging if any eventual future claims are needed

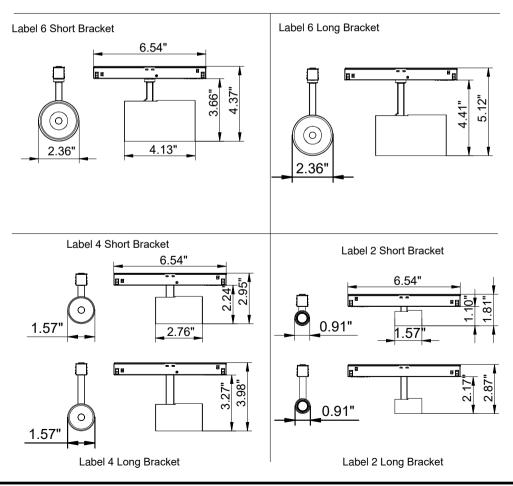




Table of Contents


Fixture Dimensions	Pg.2
Fixture Installation Instruction	Pg.3
Fixture Aiming	Pg.4
Recessed Track Installation	Pg.5
Label 2 Accessories	Pg.6
Label 4 & 6 Accessories	Pg.7
Maintenance	Pg.8
Support	Pa.8

Fixture Dimensions




Fixture Installation Instructions

- 1) The Fortyeight fixtures have three different ways of installation per track layout. These three ways are ceiling mount, wall mount for horizontal lighting, and wall mount for vertical lighting. Each of these fixture's mounting styles can only be applied to Targetti's Stucchi Low Voltage Track system only (se Fortyeight track installation guide for more details.
- 2) To install the fixture, simply grab the fixture, align the fixture's track connector with the installed track, and vertically stick the track connector inside the track until you hear the track conector snap on with its plastic side clips. The snapping sound of the fixture locking into the track confirms that the fixture is secured on the track.

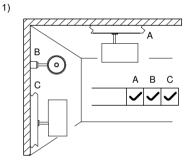

Three different Mounting Positions:

- A: Ceiling Mount
- B: Wall Mount with Horizontal Lighting
- C: Wall Mount with Vertical Lighting

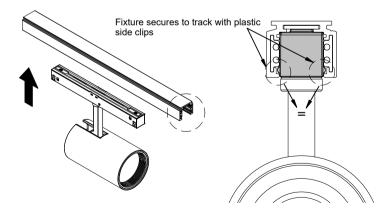


2)

Fixture Aiming


The Fortyeight Label fixtures have a wide range of motion, easy for specific directional lighting. For vertical lighting angling, the Label fixtures have a 0-90 degree rotating freedom. For horizontal lighting angling, the Label fixtures have a 0-360 degree rotating capabilities.

To adjust the fixture's angle, we recommend that you first remove the fixture from the track. To do that, pull on the fixture's body downwards (perpendicular from the track) until the fixture's connector releases from the track. This will not damage the connector or the track as it is designed for easy attaching and removing. Once removed, you may angle it to the desired lighting direction and reattach the fixture's connector back onto the track. Be sure to secure the fixture in the track by confirming the snapping sound of the connector locking inside the track.

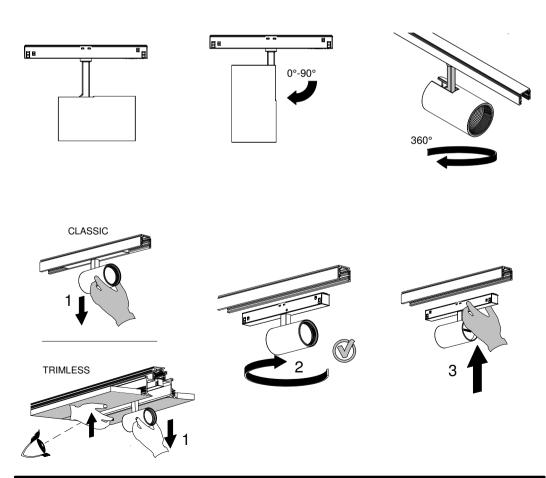


Recessed Track Installation

To install the fixture in the recessed track, all three Label types must have the long bracket attachment. Short installation fixtures will not work and will damage the fixture's track connector. With the long bracket attachment, Label fixtures follow the same installation instruction from page 3. Long bracket fixtures do not lose aiming adjust ability despite recessed installation.

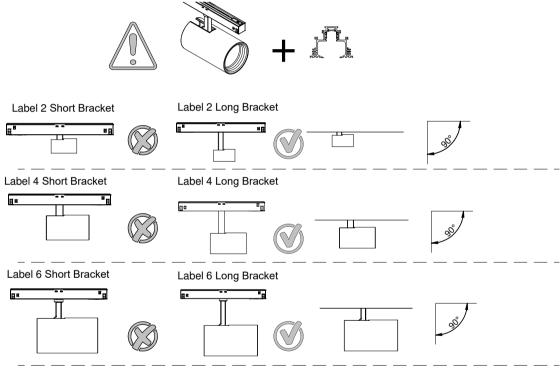

Label 2 Accessories Instructions



 




- The Label 2 fixture has the option to install a blade of light lens (cod. 1T6939) on the fixture. To attach the lens on the fixture you must do the following:
 - Remove the silicon lock ring located the inner wall of the fixture's aperture.
 - Insert the blade of light lens inside the back end of the lock ring. Be sure to adjust the lens spread direction based on the desired lighting area.
 - Once adjusted place the silicon lock ring with the attached blade of light lens back into the press and snap into place to secure

Label 4 & 6 Accessories Instructions

The Label 4 & 6 fixtures has the option to install either an anti-glare louver (cod. 1T6930) or a blade of light lens (cod. 1T6931) on the fixture.

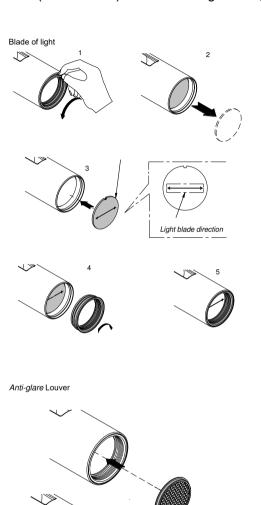

- To attach the blade of light on the fixture you must do the following:
 - Remove the lock ring located the inner wall of the fixture's aperture by
 - turning ring counter clockwise. Insert the blade of light lens inside the back end of the lock ring. Be sure to adjust the lens spread direction based on the desired lighting area.
 - Once adjusted place the lock ring with the attached blade of light lens back into the fixture and turn ring clockwise into place to secure.
- To attach the anti-glare louver on the fixture you must do the following:
 - Do not remove the lock ring located the inner wall of the fixture's aperture.
 Just insert the louver inside to the back end of the lock ring. Be sure to secure the edge of the louver ring inside the threading of the lock ring.

Maintenance

This fixture was designed and manufactured for a durable, long lasting use with minimum care. To ensure the maximum lifespan of this product, we encourage our customer to provide a quality visual inspection of the fixture every six months.

If there are any visible sign of issues (i.e moisture or dust) during the inspection, please clean any of the dust or moisture with a soft cloth and check to make sure that any of the fixtures are still operating normally. If there are any issues regarding the fixture please contact us as we will assist the situation at hand.

Support

Any questions, problems, or comments you have please feel free to contact our Customer Service department during our business hours Monday-Friday 8am-5pm via:

Email: usaorders@targetti.com Phone: (714) 513-1991

Visit our website: http://www.targettiusa.com

