
TARGETTI

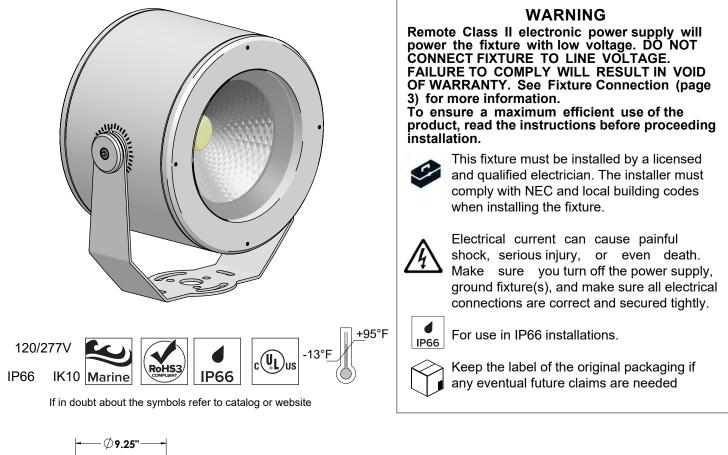


PROFESSIONAL ADJUSTABLE

FLOODLIGHT

DART ROUND MAXI DRL41-





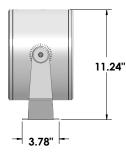


 



Table of Contents

Pg.2 Pg.3 Pg.4-9 Pg.10-13 Pg.14 Pg.15
Pg.15

Packaging Contents

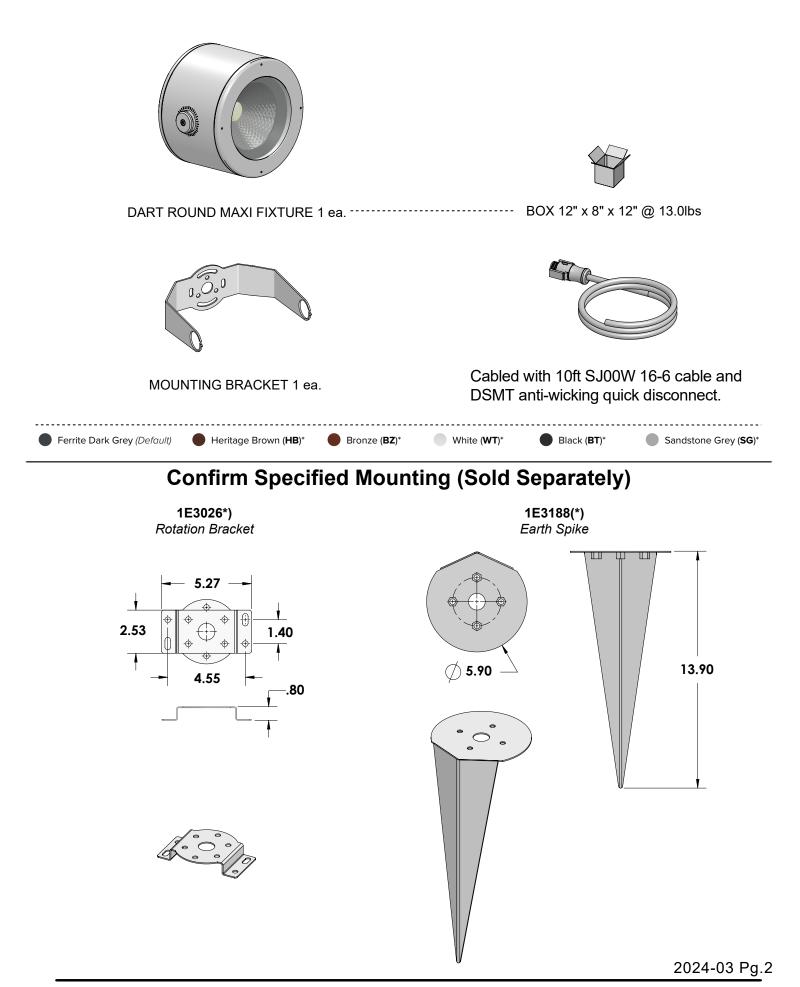


Mounting Installation

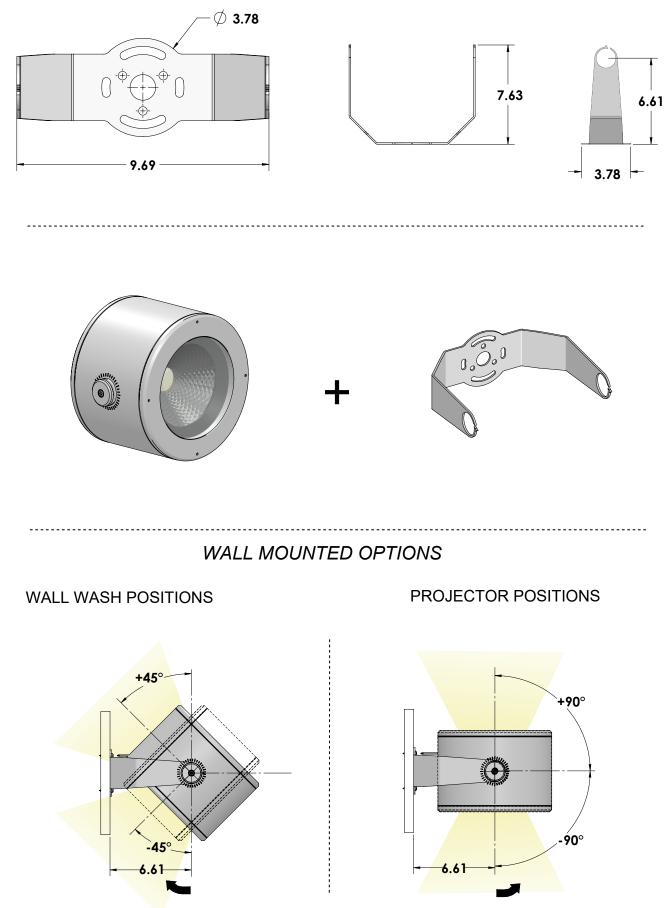


Mounting Accessories

Mounting Accessories (Optional) Maximum of one accessory per fixture

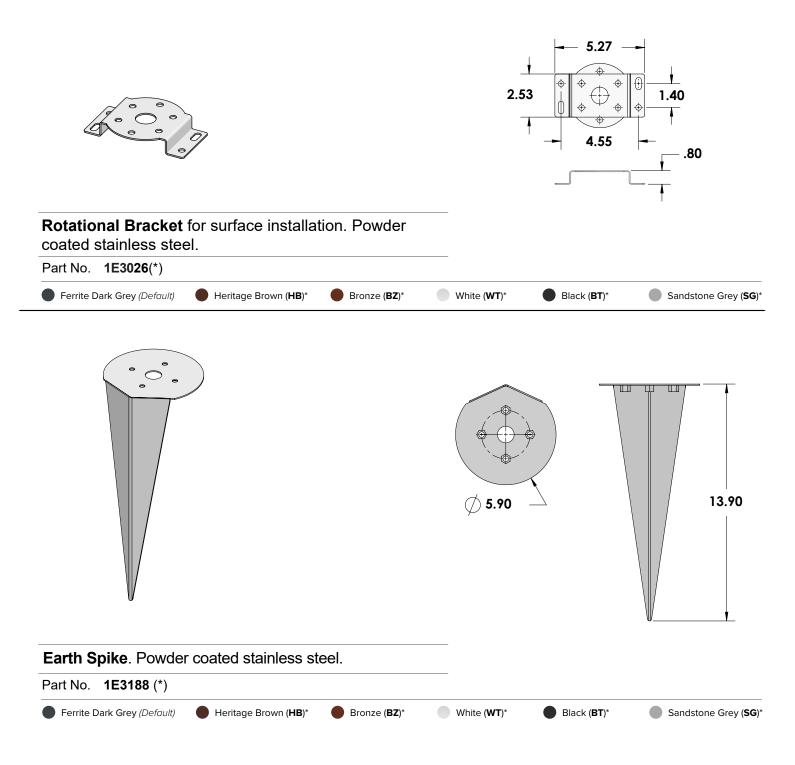


Fixture Bracket Installation

Fixture bracket can be installed directly onto mostly any surface. (included 1 per fixture) Drill 2 holes on the surface at the corresponding distance and then attach bracket using proper hardware depending on mounting surface. Depending on the holes used for mounting, the bracket can provide rotation adjustability of +/-60°.

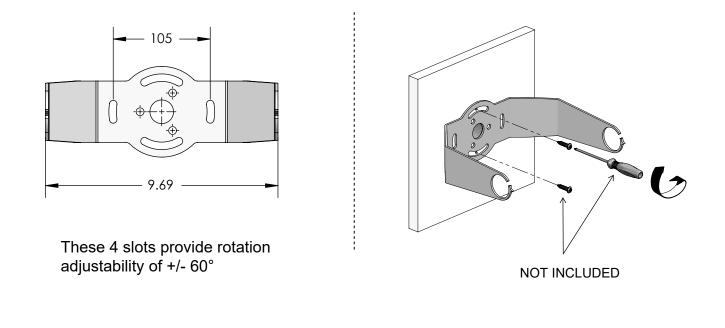


LED Fixture Assembly / Fixture Bracket


To assemble the fixture and the fixture bracket together, use a 5 millimeter Allen wrench to loosen the 2 screws on the sides of the fixture to create a gap of approximately 0.13" between the button and the fixture (Allen wrench provided by others).

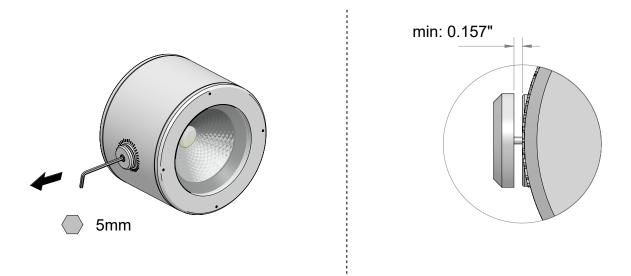


Fixture Bracket Installation

Once both sides have been loosened and the gap was created, insert the bracket into the gaps using the openings at the end of the bracket as shown on images below. Once inserted, aim to the desired angle and tighten.

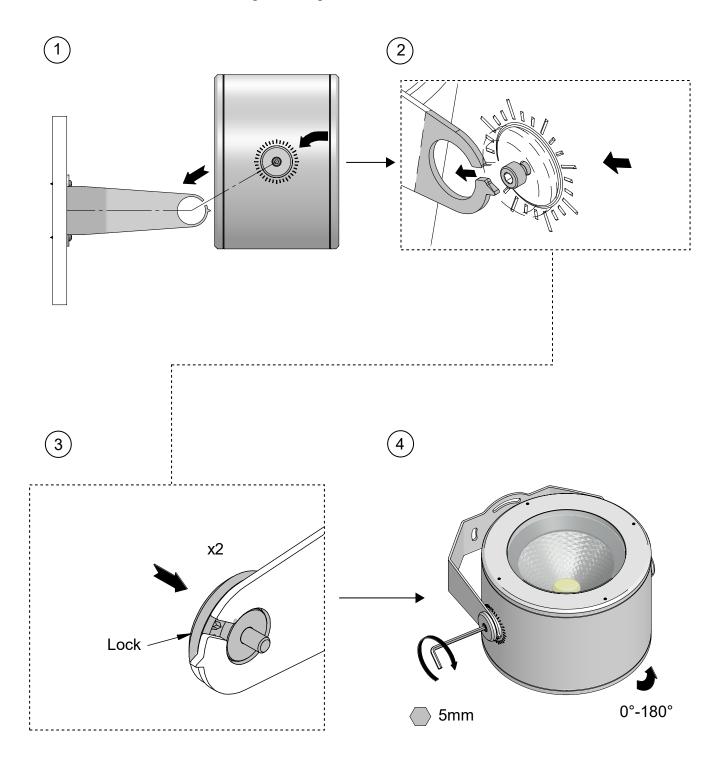

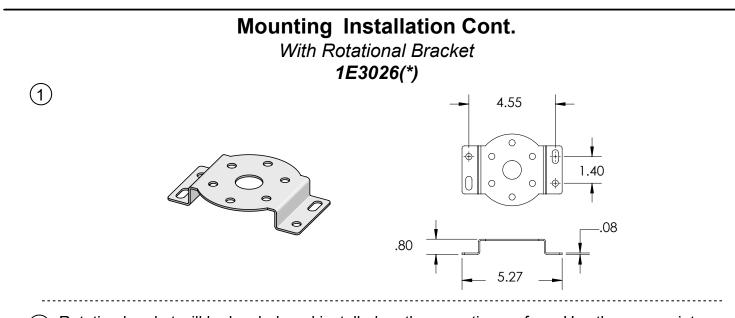


Rotation bracket will be leveled, and installed on the mounting surface. Use the appropriate fasteners or anchors to mount the bracket onto mounting surface. Once the rotation bracket is mounted onto the surface, place the two hex screws through the bracket and rotation plate as shown. Then place the the body of the fixture on top of the mounted bracket. Adjust the fixture to the desire lighting position before locking the two hex screws on top of the mounting bracket.

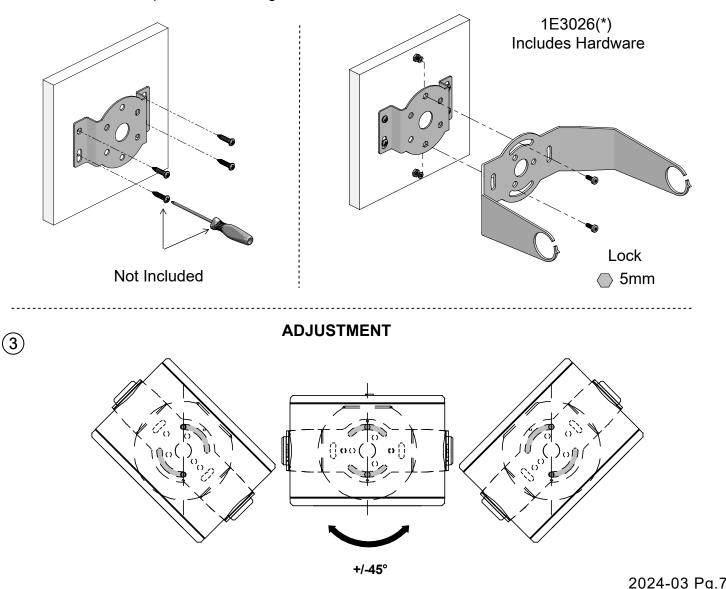



Mounting Installation Cont. Earthspike Installation 1E3028*

Earthspike will be installed on the mounting ground and should be stable and sturdy before mounting fixture. Use the appropriate fasteners or anchors to mount the bracket onto mounting surface.

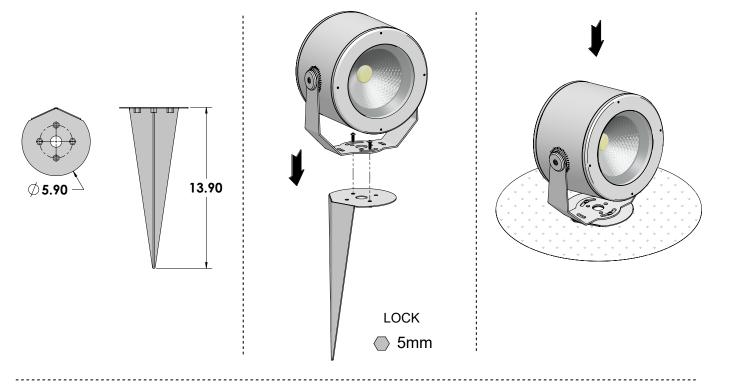

2 Once the earthspike is mounted onto the surface, place the two hex screws through and place the the body of the fixture on top of the mounted bracket. Adjust the fixture to the desire lighting position before locking the four hex screws on top of the mounting bracket.

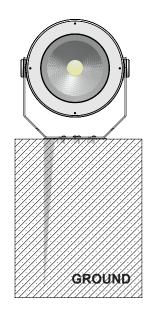

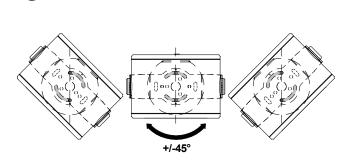


ADJUSTMENT

(3)

Adjustable up to $\pm 45^{\circ}$ with slotted mounting base with aim locking screw.


External Optical Accessories (Optional)

Maximum of Two Accessories Per Fixture

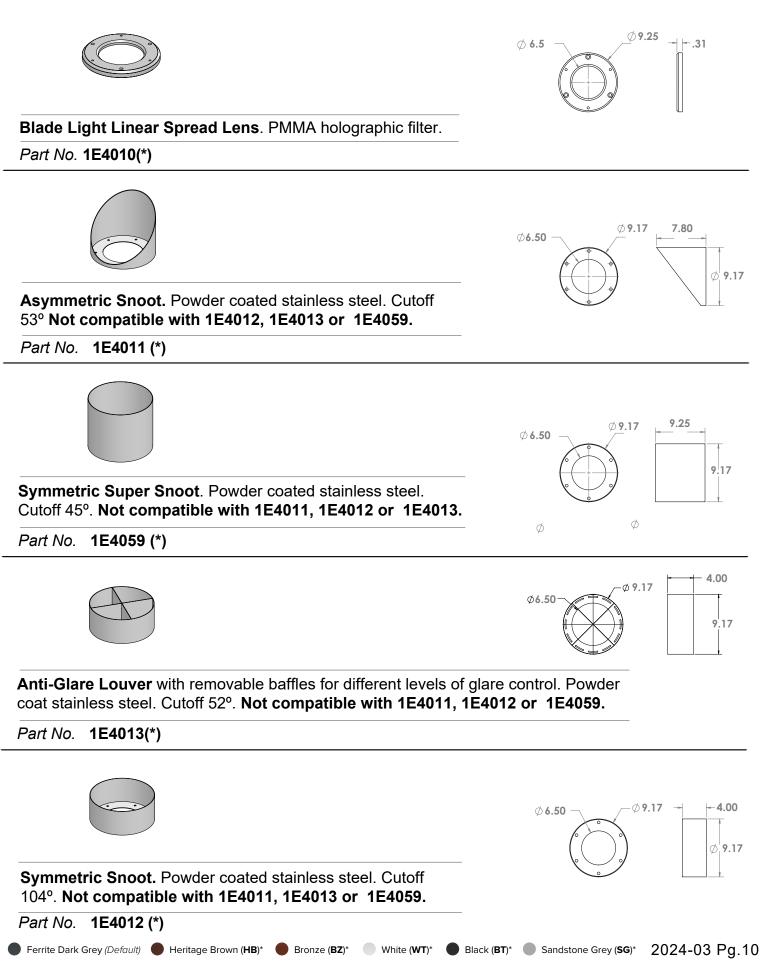


Confirm Specified Accessory (Sold Separately)


**In order to attach accessories onto the fixture, you must first remove the 4 screw caps from the glass screen. Place the blade light filter onto the LED fixture's face, align holes on accessory to holes on fixture. Once the 4 holes are aligned, insert the 4 screws (provided with asymmetric snoot) into the LED fixture head and tighten with a 3mm Allen wrench to complete installation. Maximum of two accessories per fixture.

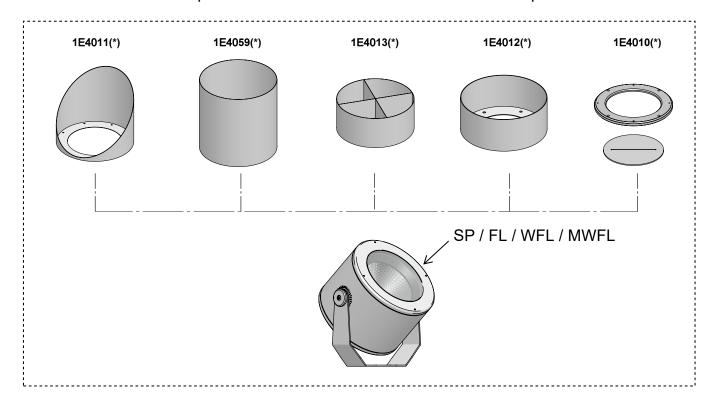


Take the set screw off to fix the accessories

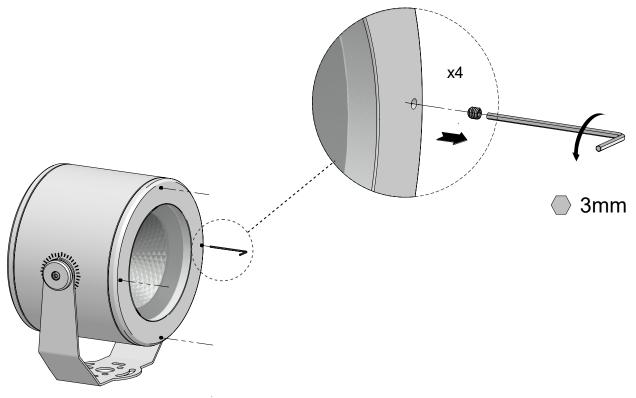

Confirm Specified Accessory Cont. (Sold Separately)

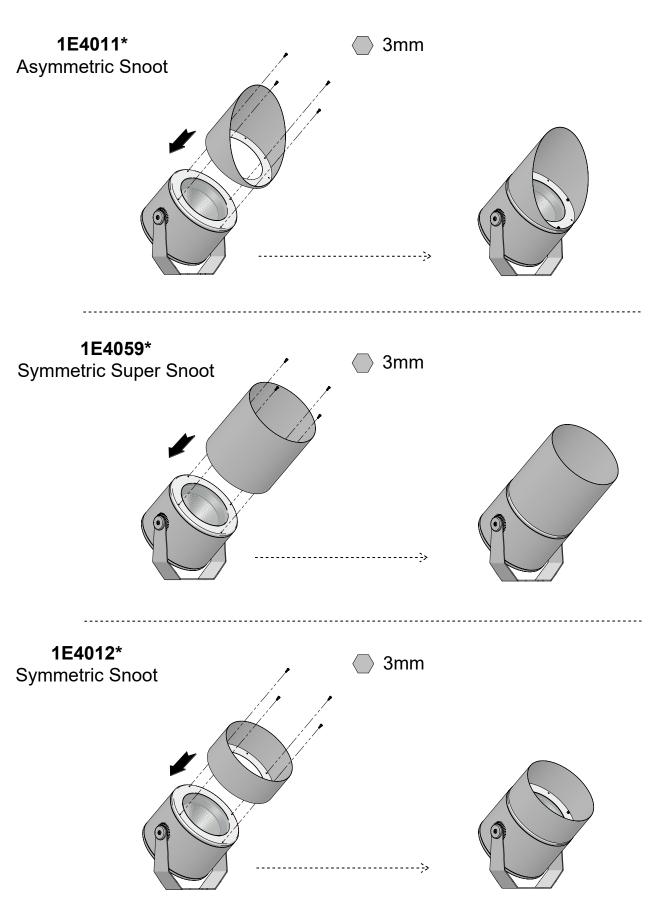


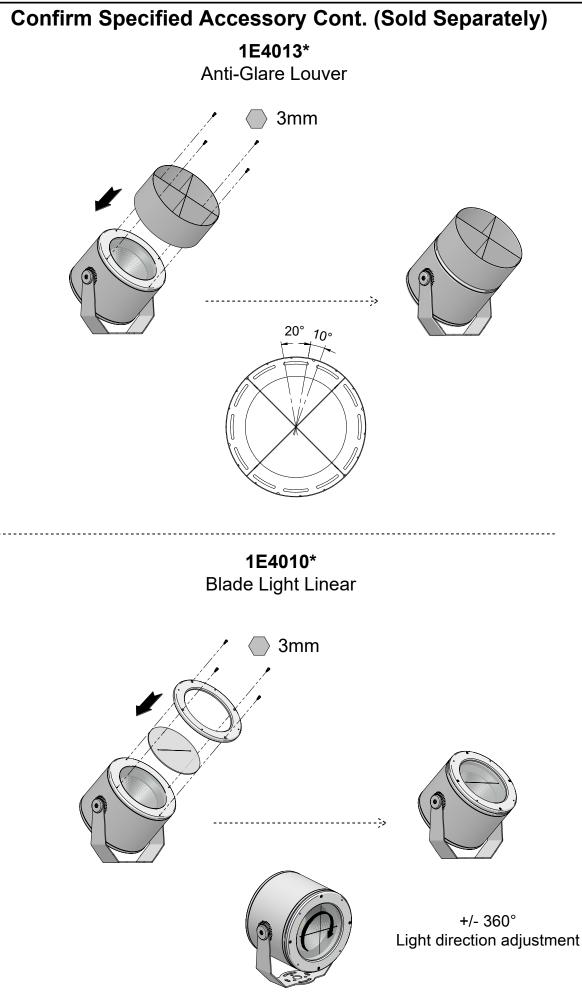

Fixture Wiring Diagram

Follow the directions below to complete a successful connection.

- Use proper UL listed waterproof wire connectors depending on conductor size.
- Ground every fixture accordingly.
- Make color coded connections.
- Double check every connection and make sure they are correct and secured.

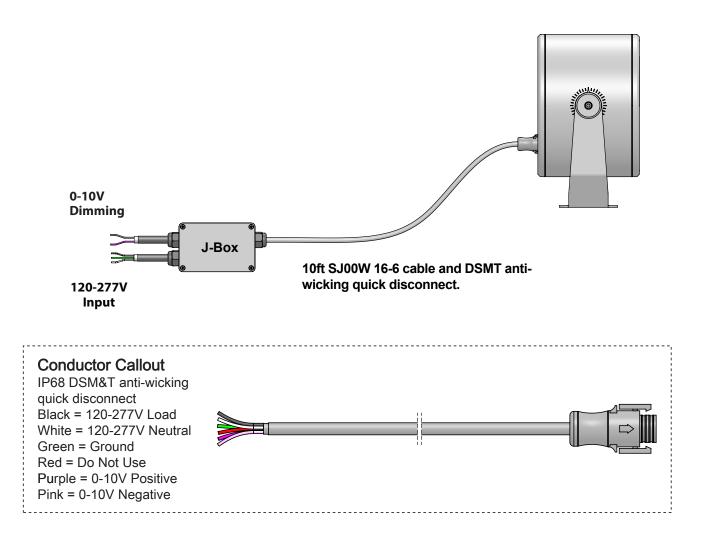

Maintenance

This fixture was designed and manufactured for a durable, long lasting use with minimum care. To ensure the maximum lifespan of this product, we encourage our customers to provide a quality visual inspection of the fixture and installation accessories every six months. If there are any visible signs of issues (i.e moisture or dust) during the inspection, please clean any of the dust or moisture with a soft cloth and check to make sure that any of the fixtures are still operating normally. If there are any issues regarding the fixture, please contact us as we will assist the situation at hand.

Support

Any questions, problems, or comments you have please feel free to contact our Customer Service department during our business hours Monday-Friday 8am-5pm via: Email: usaorders@targetti.com Phone: (714) 513-1991

Visit our website: http://www.targettiusa.com